








# NORO®

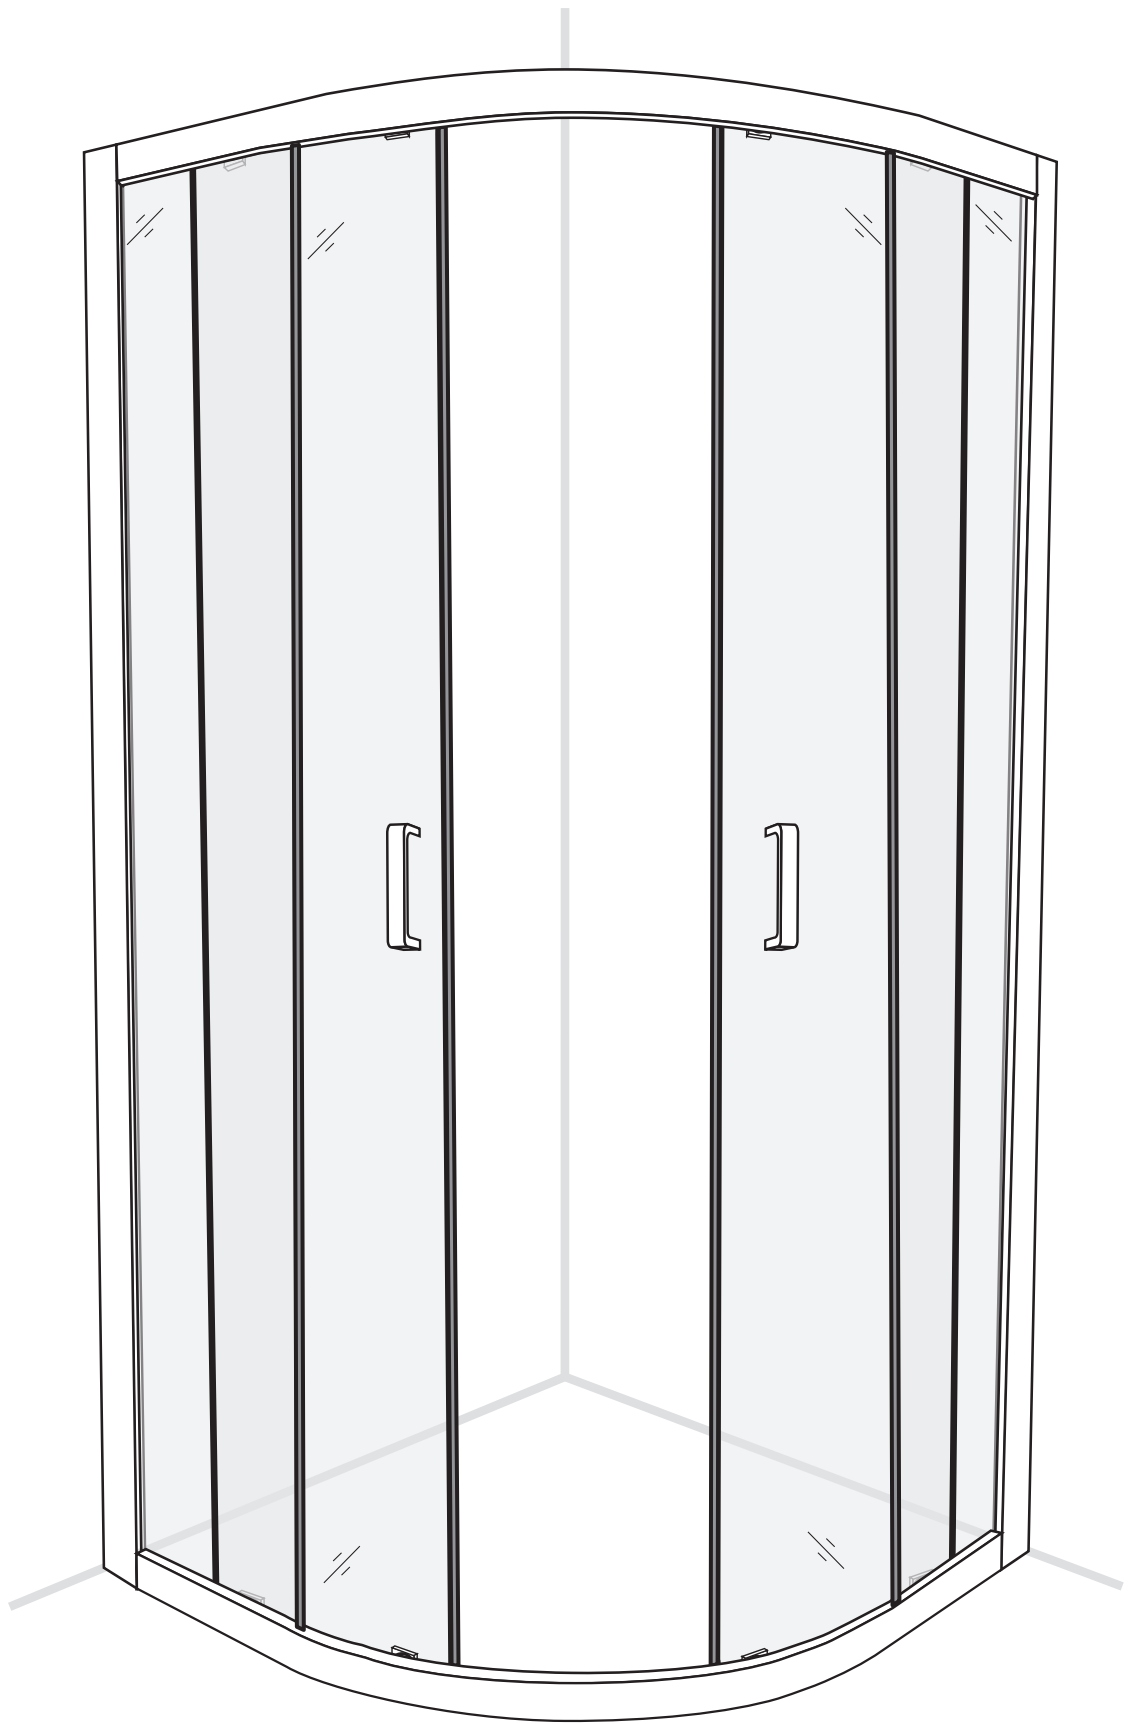


Snow R


## Getting Start:

	<p>This product fulfils the EN14428 standard</p>		<p>Googles are recommended to protect the eyes</p>
	<p>All glass used are tempered security glass</p>		<p>Caution: Always Handle Glass With Care! Always protect the edges and corners of the glass when assembling.</p>
	<p>2 people are recommended to assemble this shower enclosure</p>		<p>Gloves are recommended to prevent slippery on glass</p>


## Tools Needed:

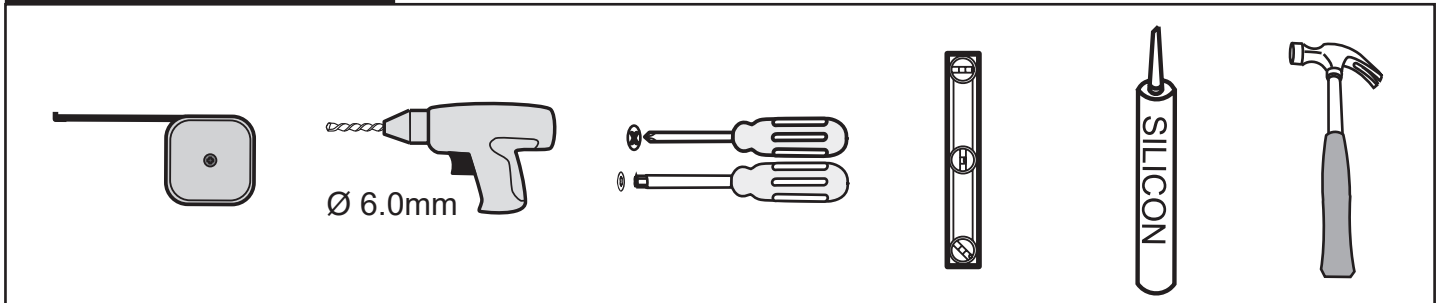






## Accessories Bags:

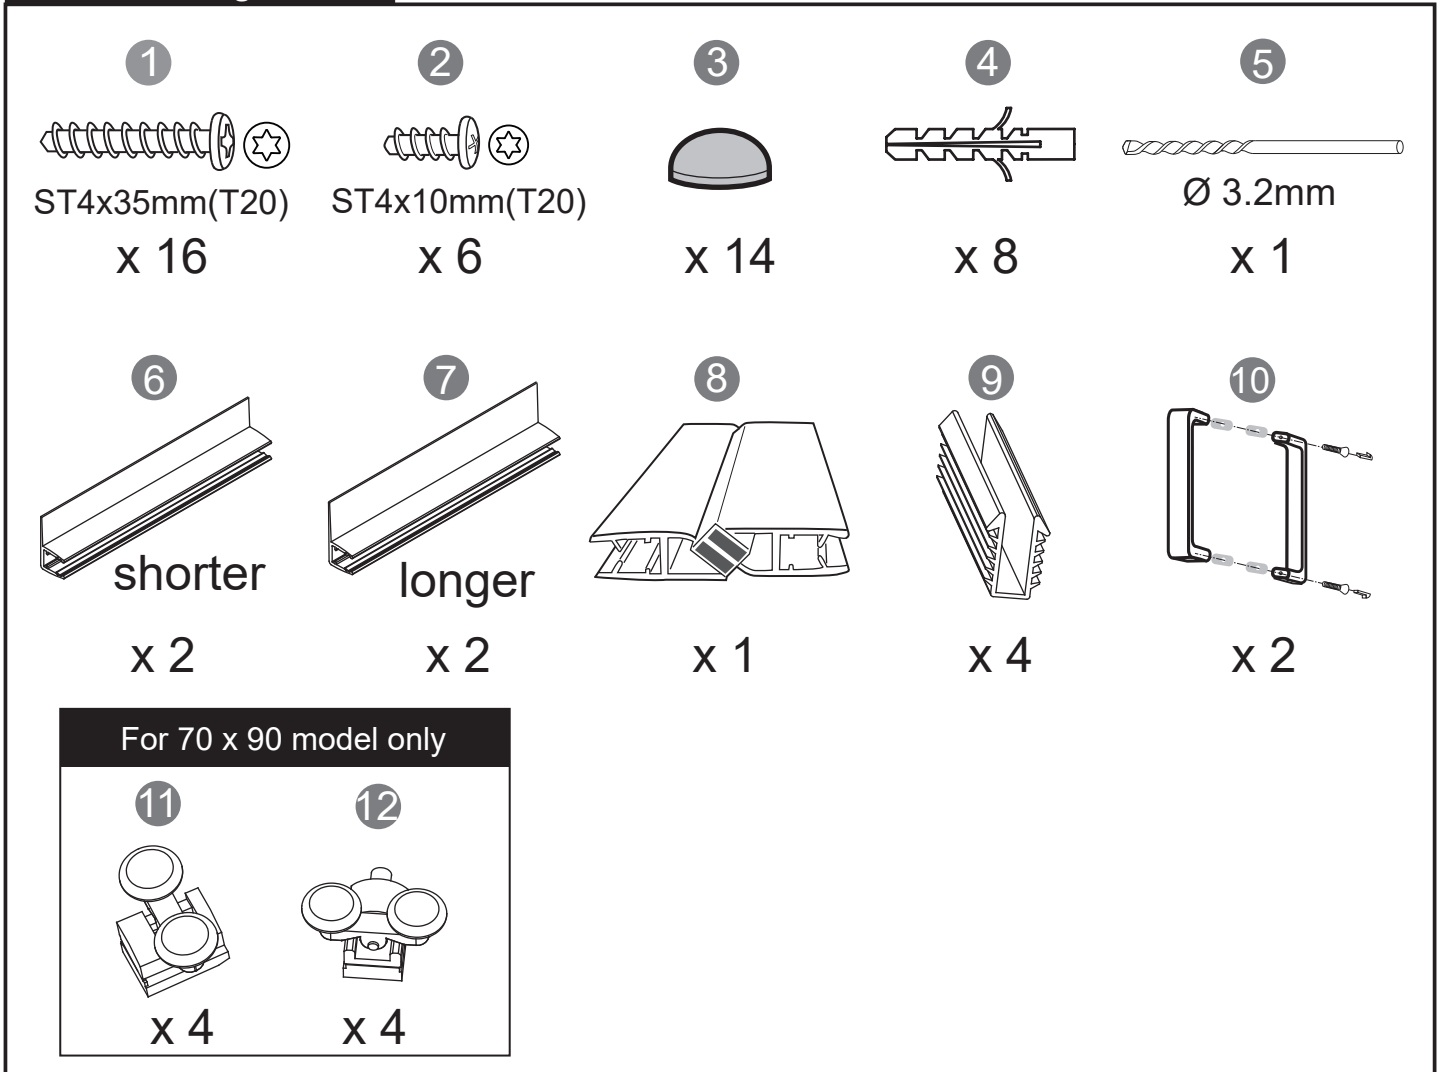

**Measurement:**

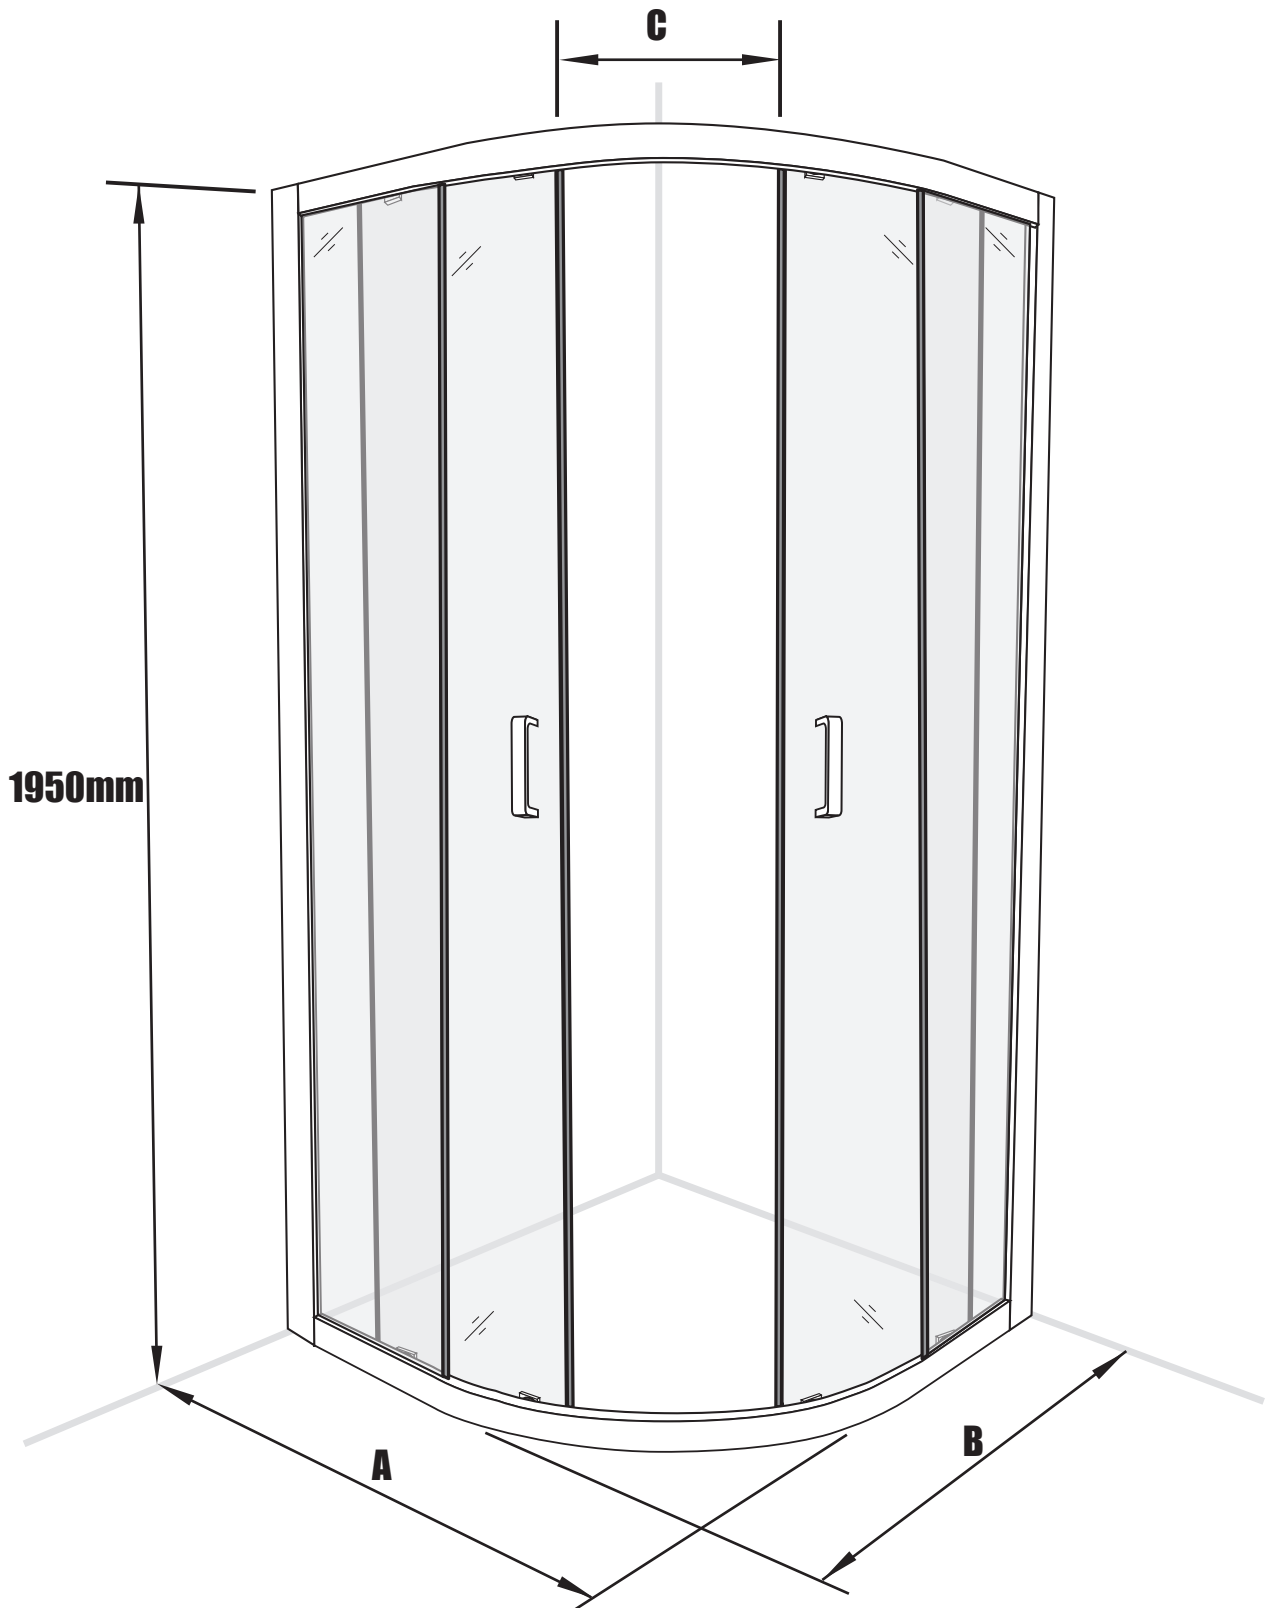








<b>Model</b>	<b>A</b>	<b>B</b>	<b>C</b>
<b>90x90</b>	900mm	900mm	545mm
<b>80x80</b>	800mm	800mm	410mm
<b>70x90 (reversible)</b>	700/900mm	900/700mm	385mm

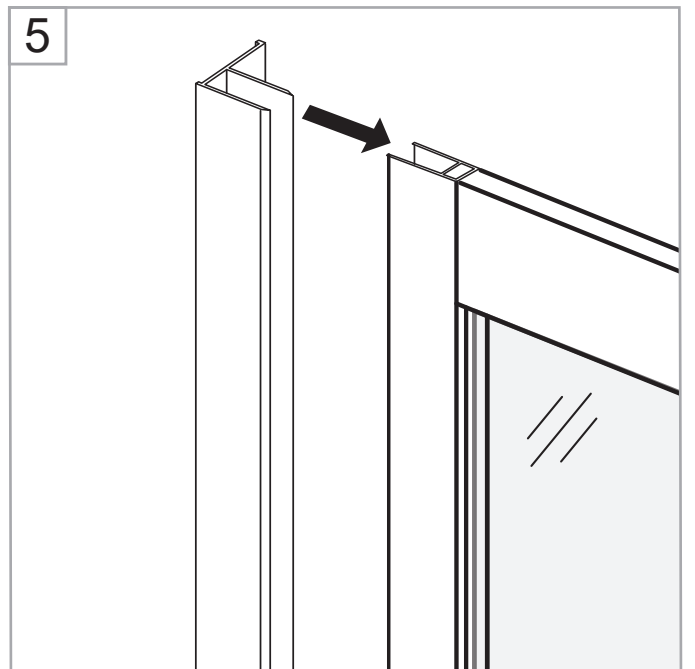
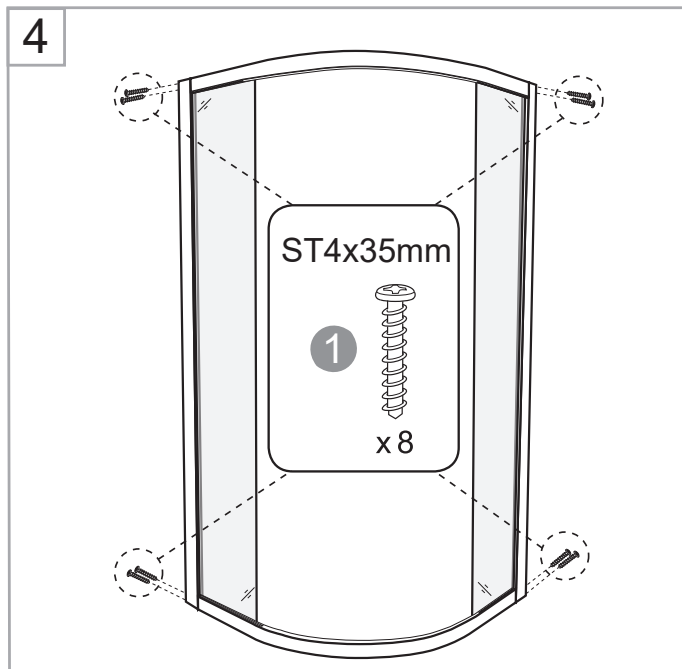
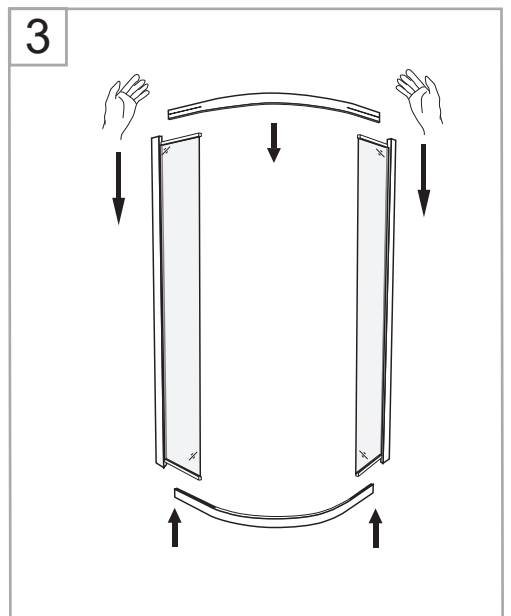
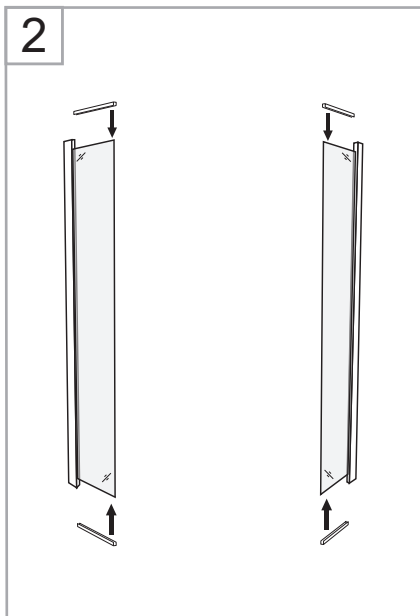
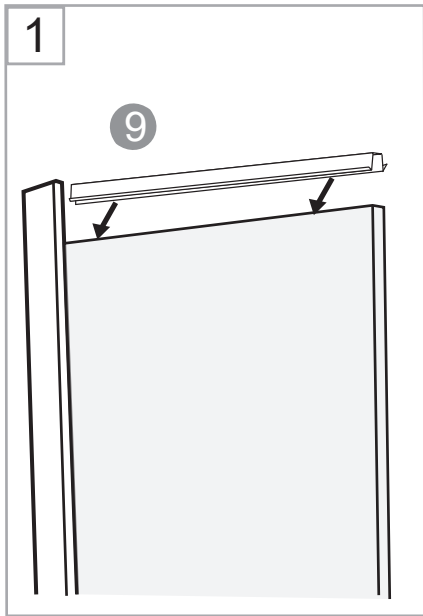


6


	A	B
90x90	890~910mm	890~910mm
80x80	790~810mm	790~810mm
70x90	690~710mm / 890~910mm	890~910mm / 690~710mm

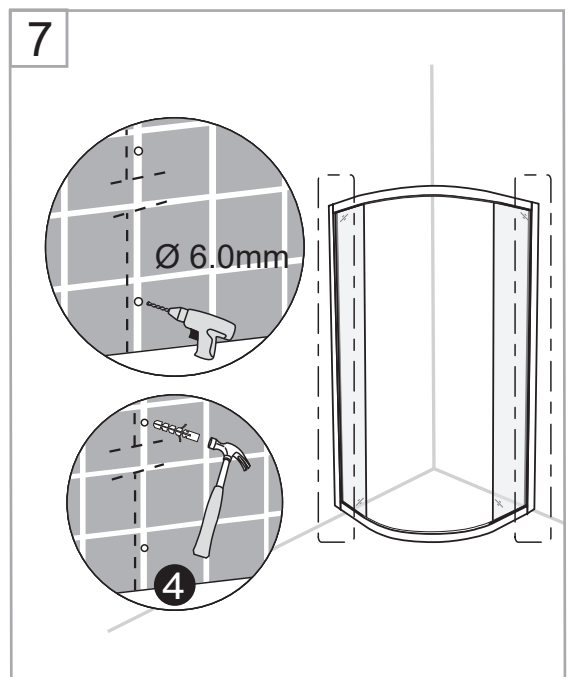

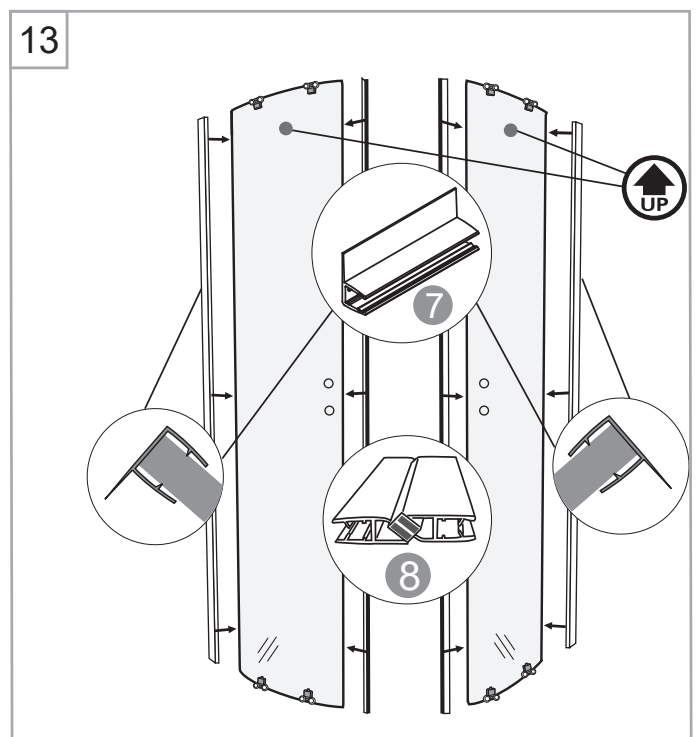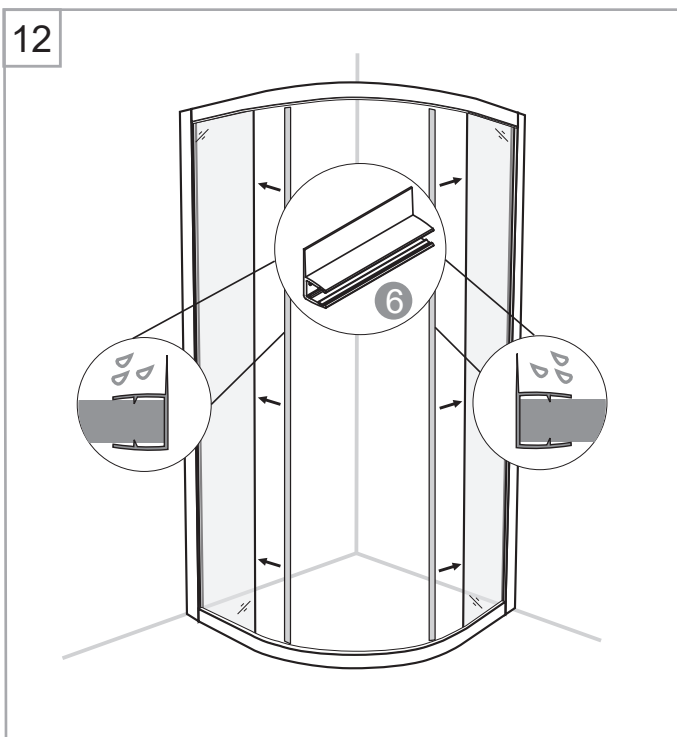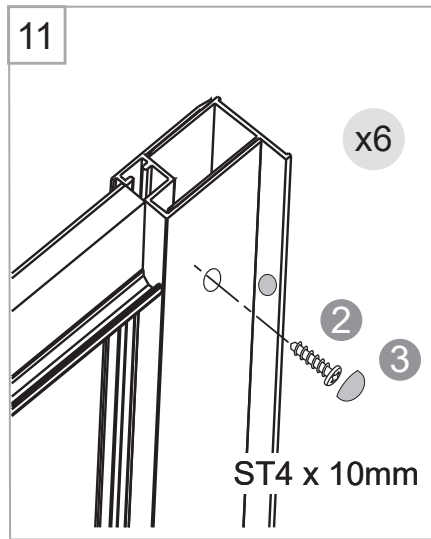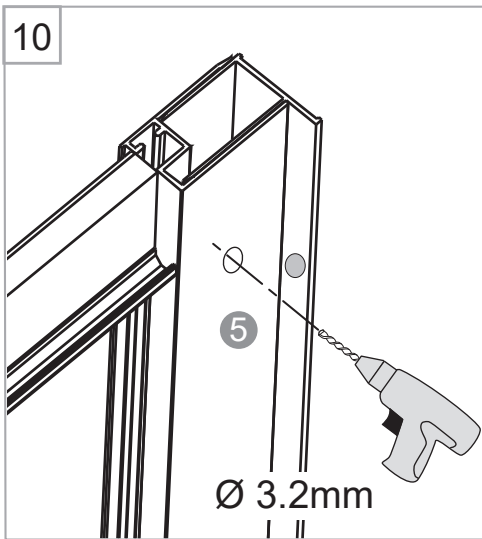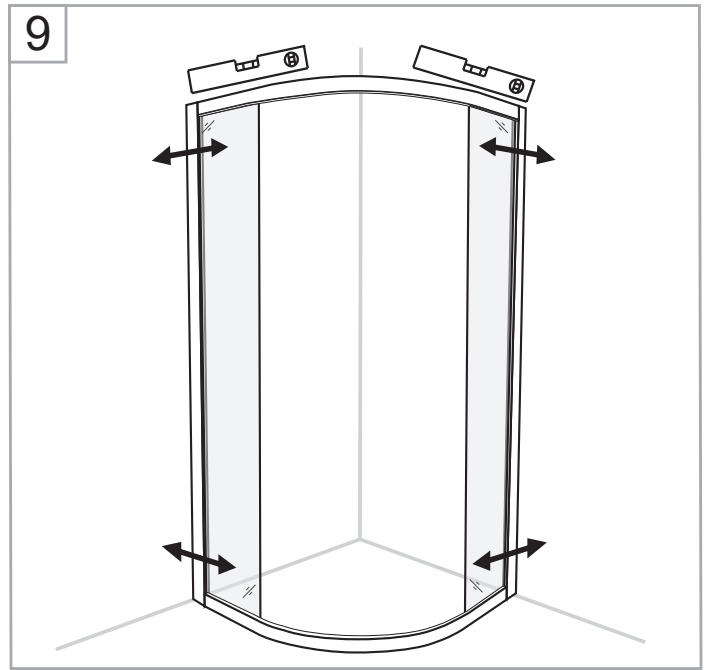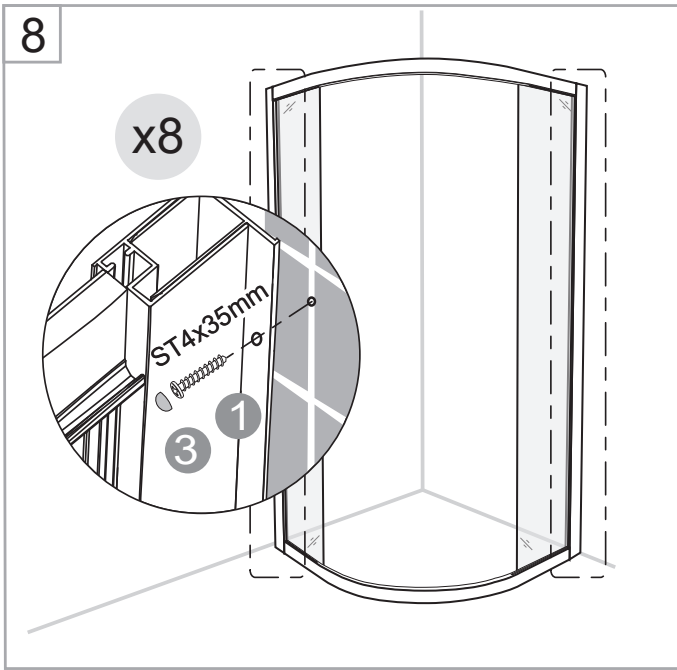


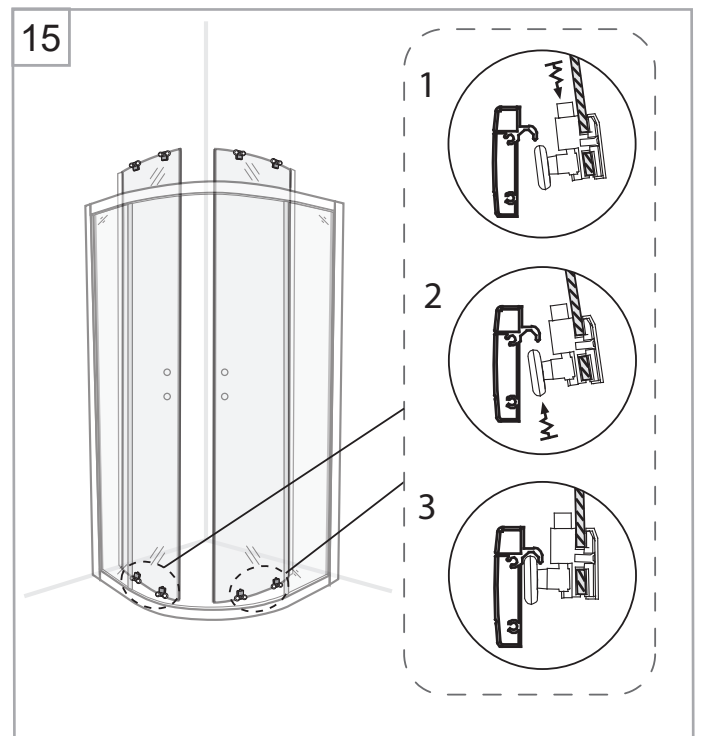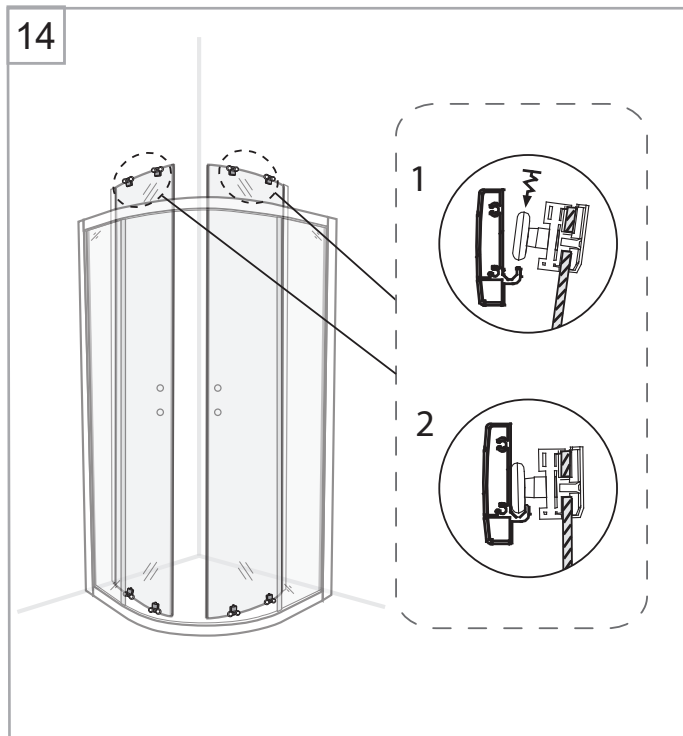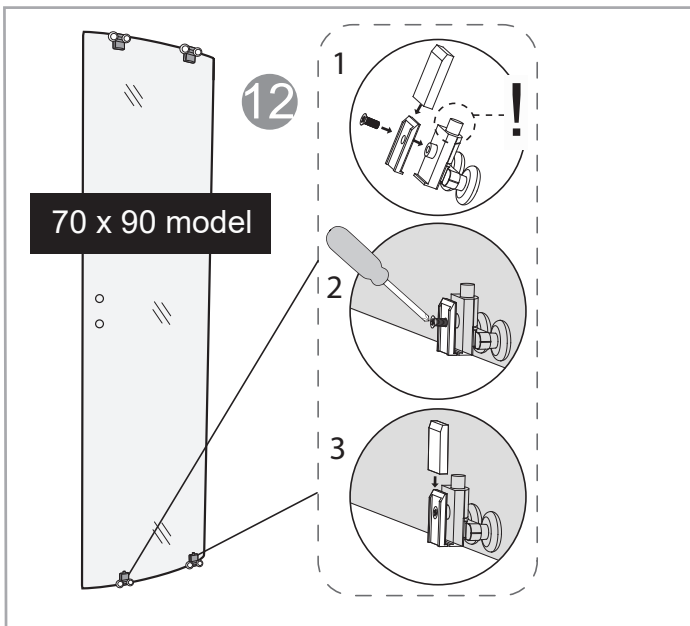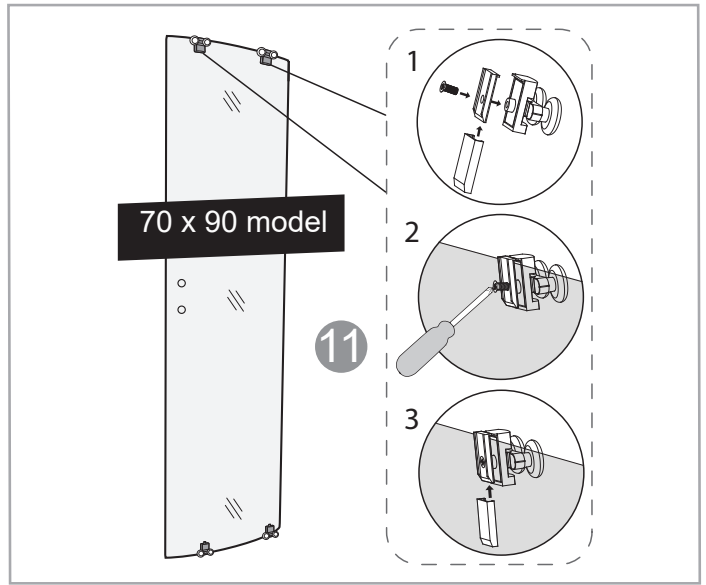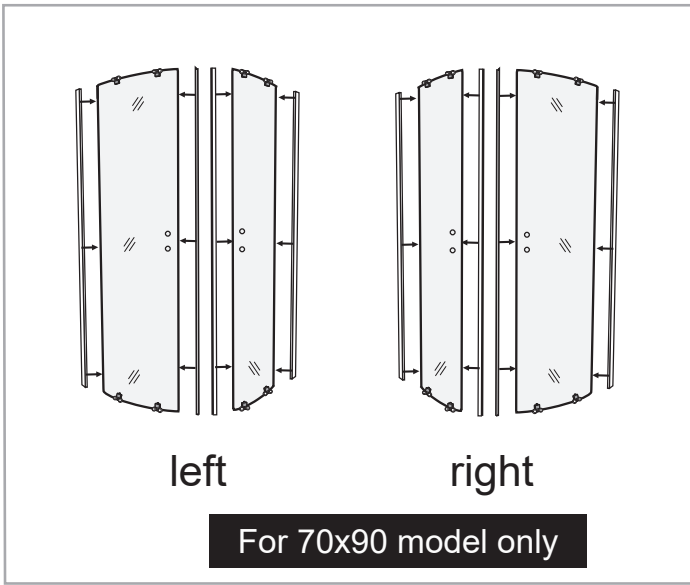


16

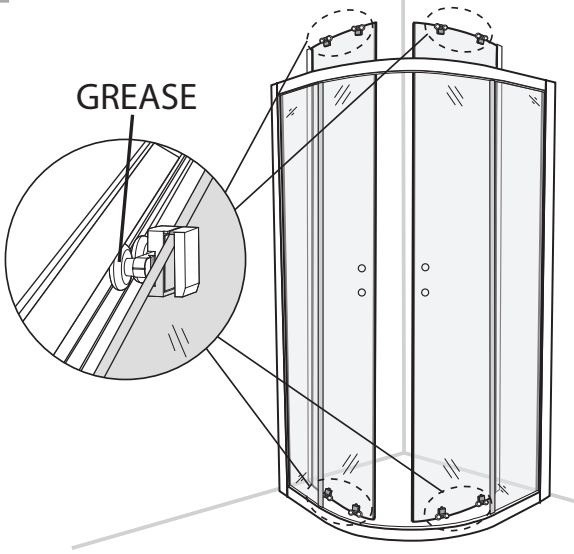

17

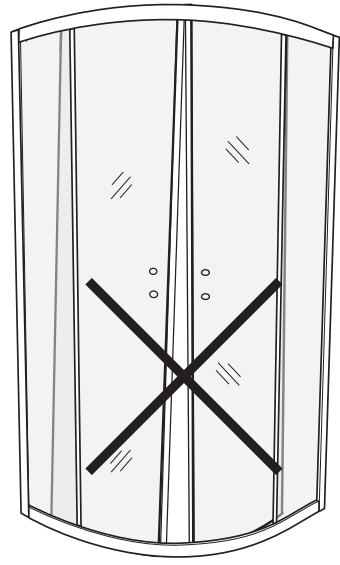

18

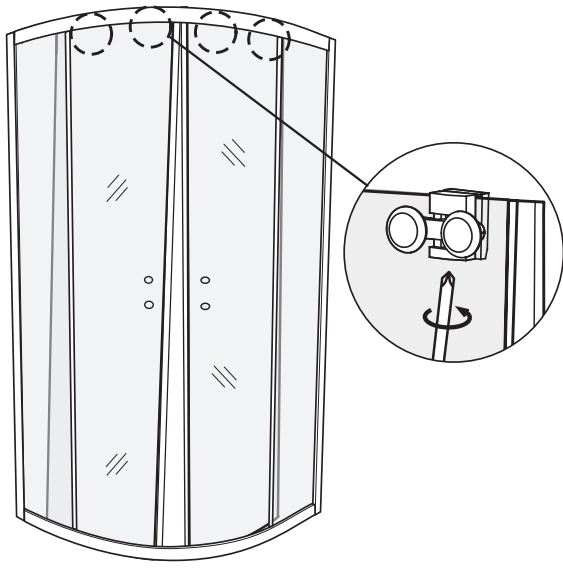


19


OK




20

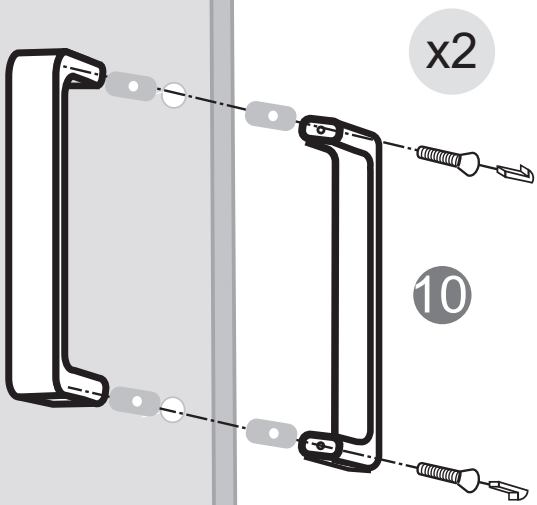

21

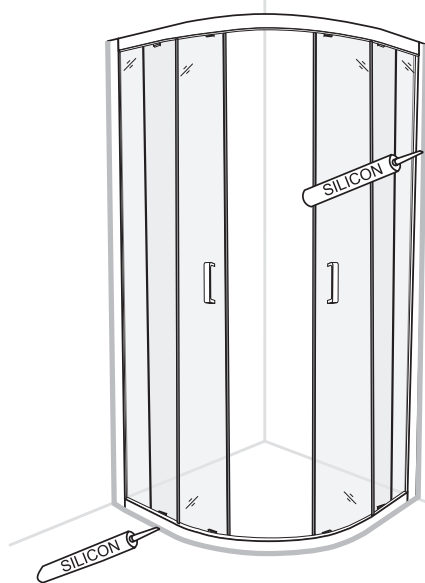

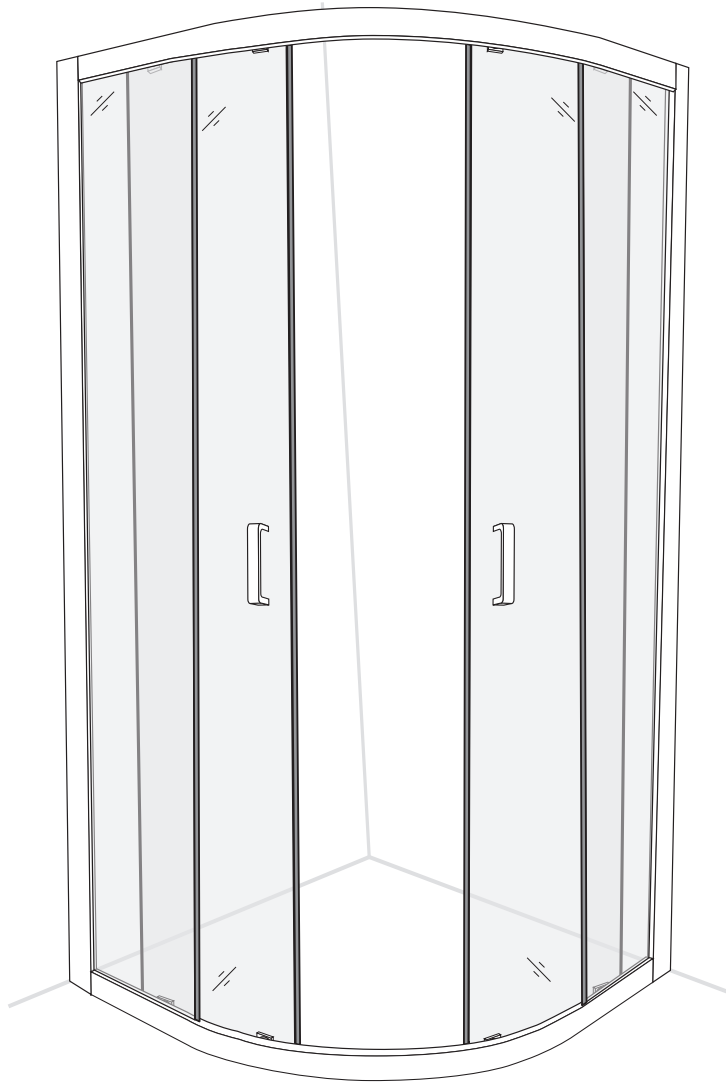

# SNOW R

035 166430 **SE**  
info@noro.se

020 7435740 **FI**  
info@norokylpyhuone.fi

692 36170 **NO**  
info@noro.se

070 252822 **DK**  
info@noro.se