


NORO®

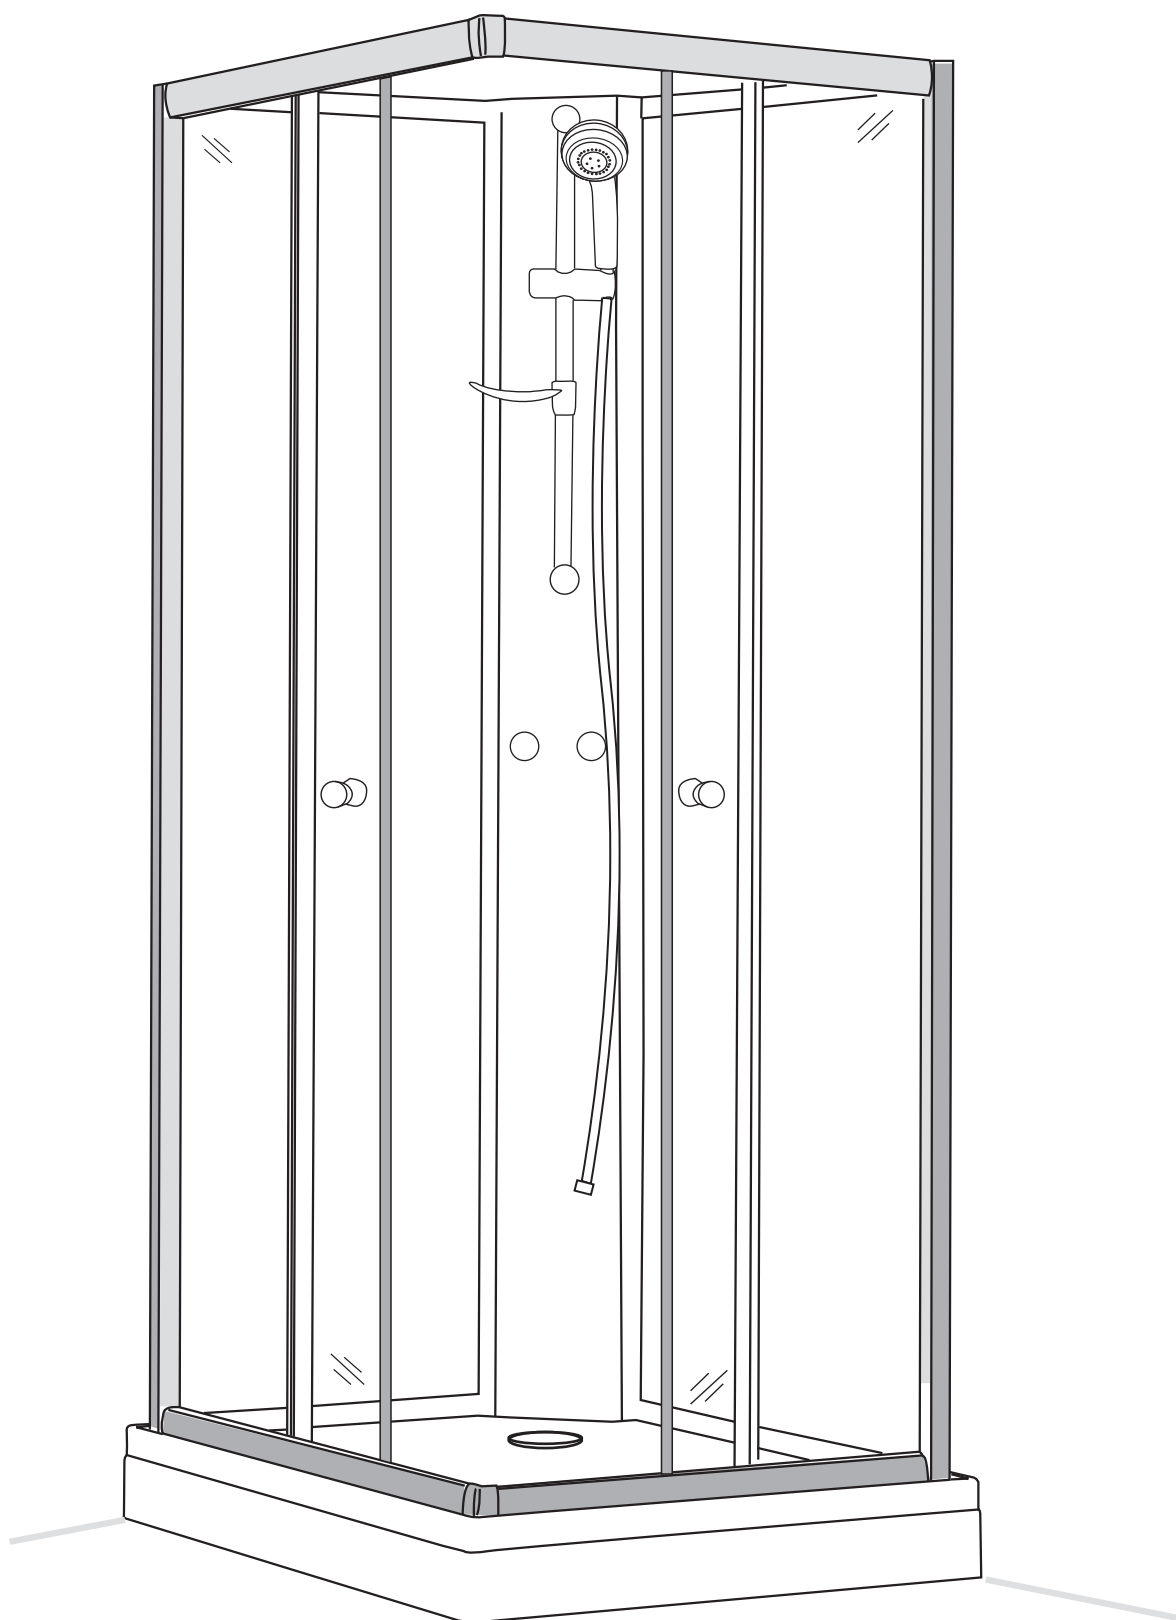


PACIFIC C


Getting Start:

 EN14428	This product fulfils the EN14428 standard		Goggles are recommended to protect the eyes
 EN12150	All glass used are tempered security glass		Caution: Always Handle Glass With Care! Always protect the edges and corners of the glass when assembling.
	2 people are recommended to assemble this shower enclosure		Gloves are recommended to prevent slippery on glass






Tools Needed:

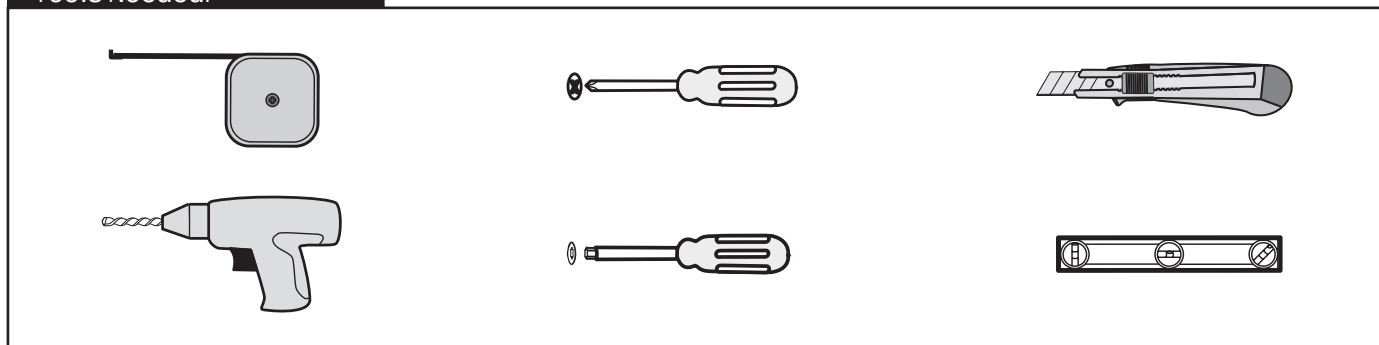

Accessories Bags:

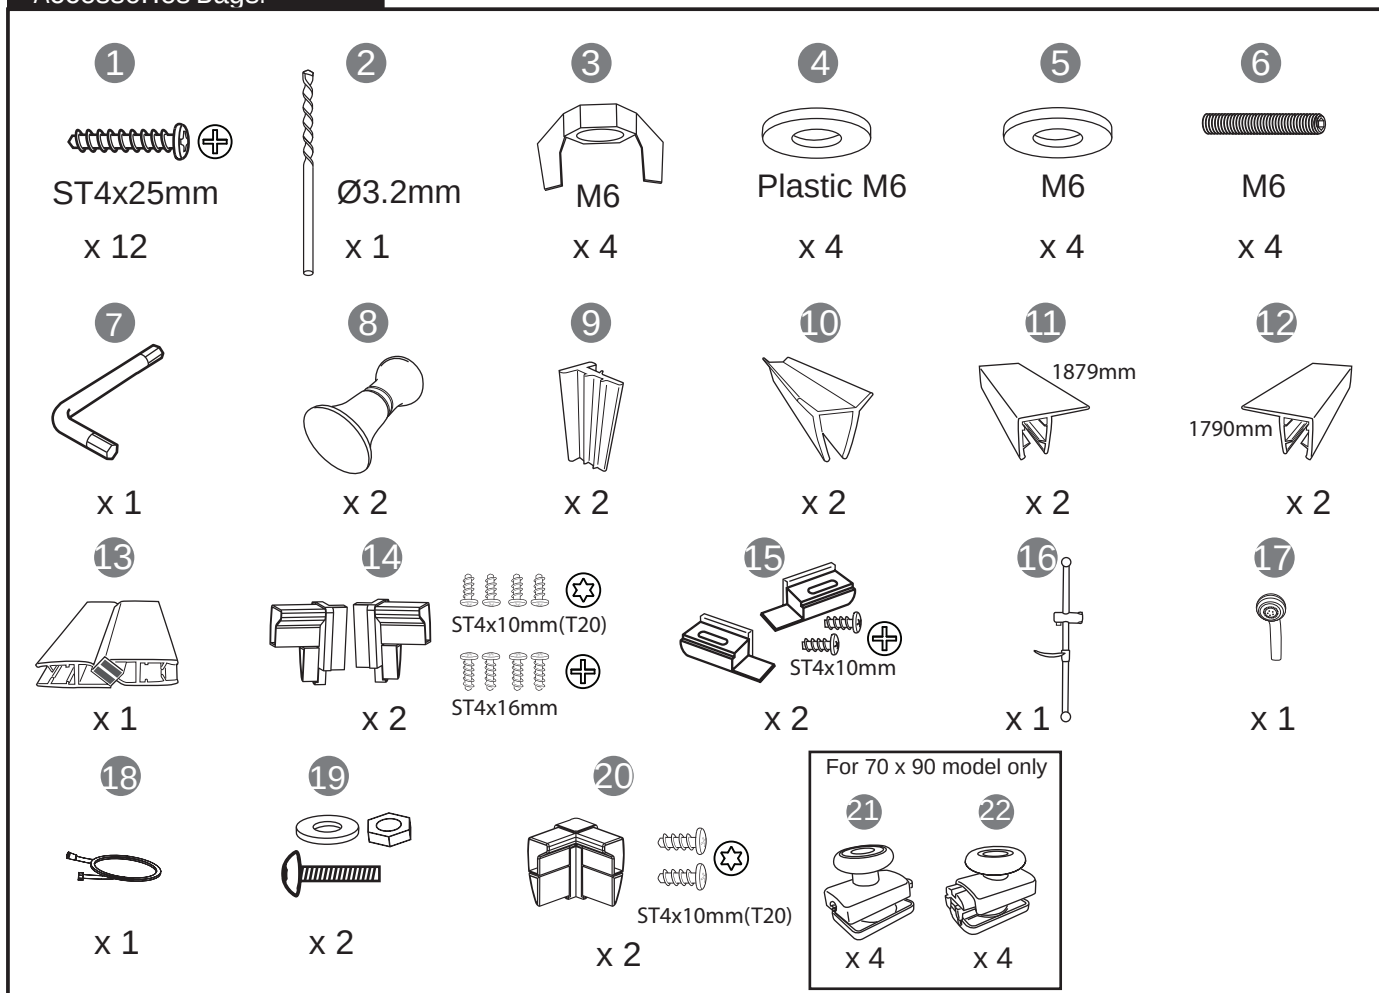


Exploded View:

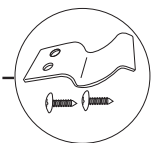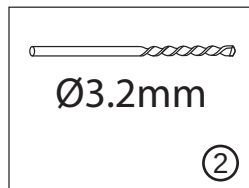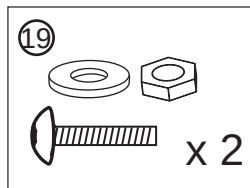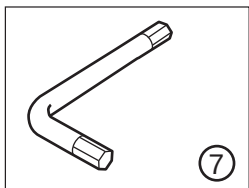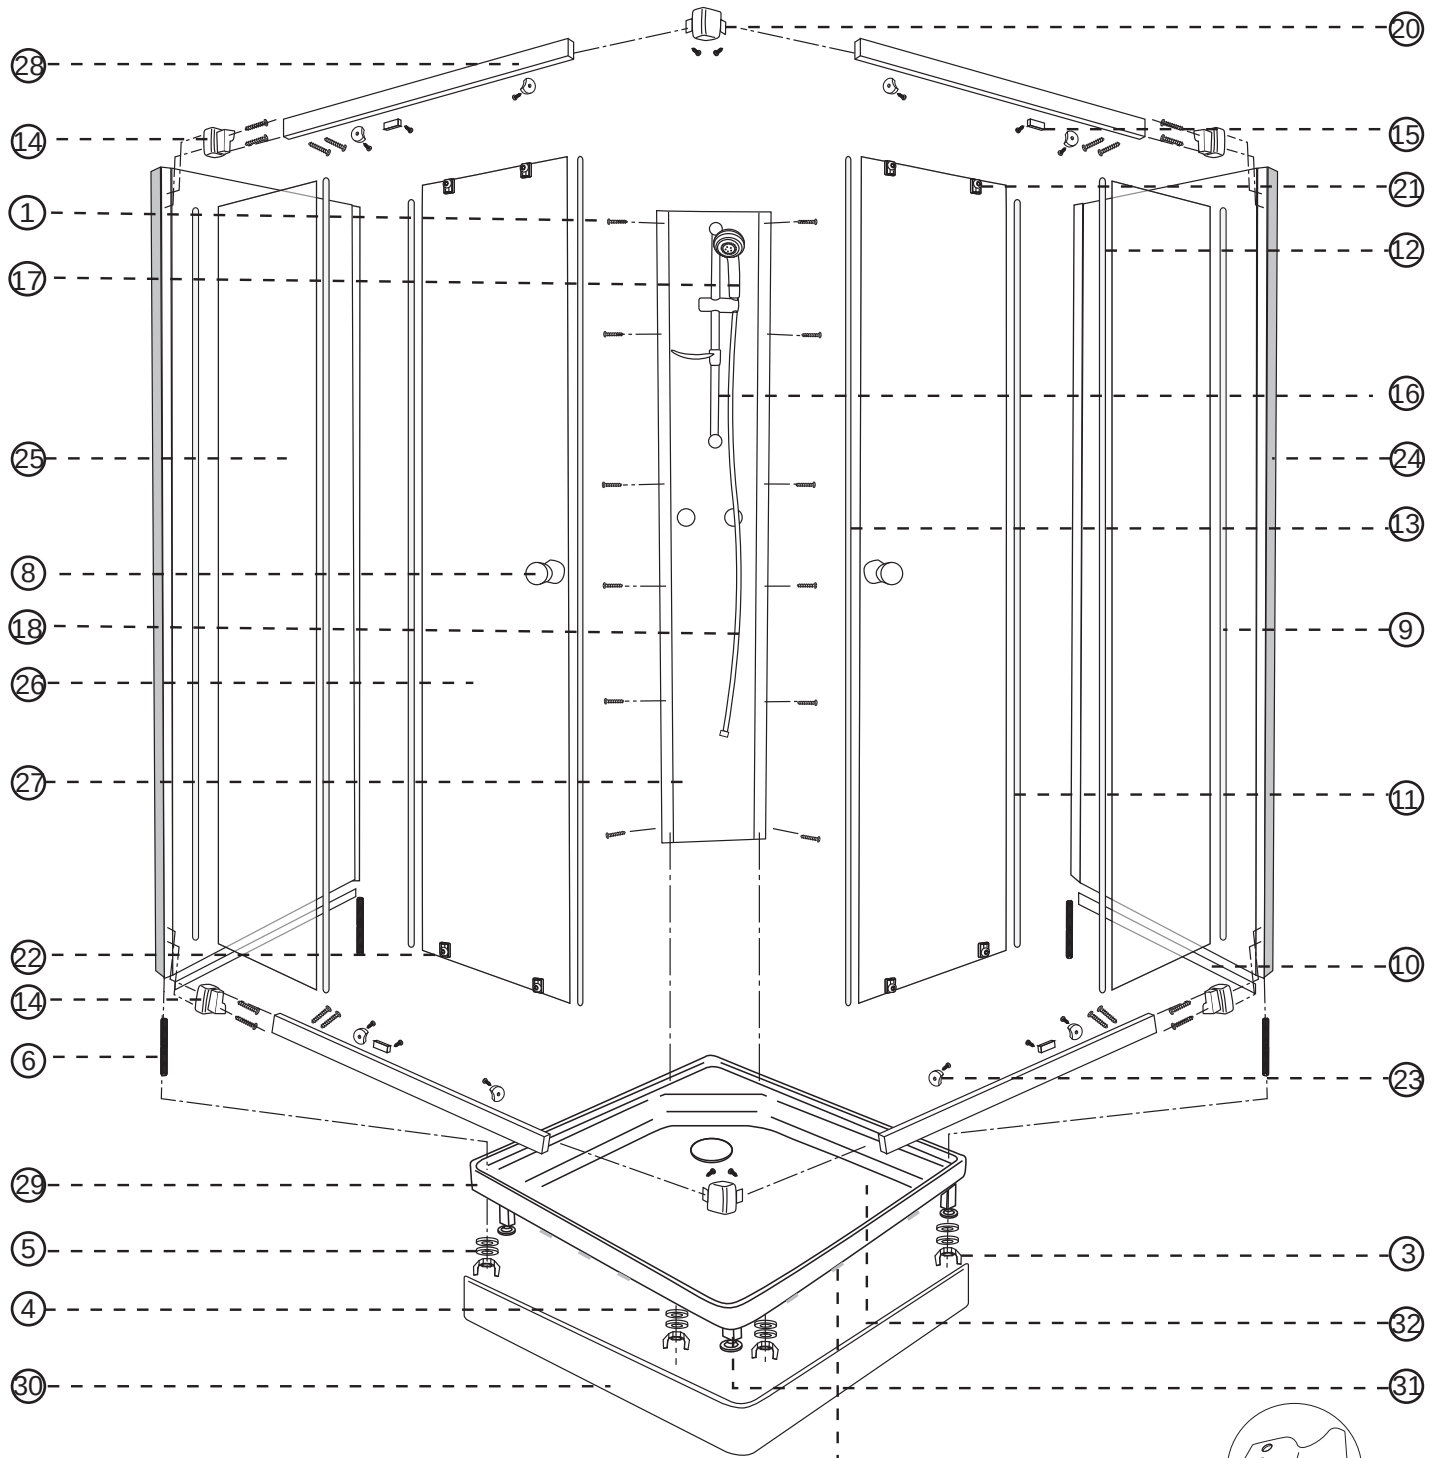

Exploded View:


Drawing Nr.	Art Nr.	Description	Unit
1	9400-A	ST4x25mm screw	set
2		Drill bit(3.2mm)	
3		Hexagon tail screw nut	
4		Plastic M6 spacer	
5		M6 washer bolt	
6		M6-ST4.5 tray corner screw	
7		Allen key	
8	9400-B	Plastic handle set	set
9	9400-C	Back panel gasket	set
10		Back panel bottom gasket	
11	9400-D	Door water protection gasket	set
12		Side panel water protection gasket	
13		Magenetic door gasket	
14	9400-E	Pacific plastic connetor set with screws	set
15	9400-F	Glass clip set (lower & upper)	set
16	9400-G	Sliding bar	pc
17	9400-H	Shower head	pc
18	9400-I	150cm shower hose	pc
19	9400-J	Sliding bar screw set	set
20	9400-K	Pacific plastic corner with screws	set
21	9400-L	Upper wheel	set
22		Lower spring wheel	
23	9400-M	Plastic door stopper,ST4x10mm screw	pc
24	9400-N	Back panel for Pacific C (900mm)	pc
	9400-O	Back panel for Pacific C (800mm)	pc
	9400-P	Back panel for Pacific C (700mm)	pc
25	9400-Q	Side panel glass for Pacific C (900mm)	pc
	9400-R	Side panel glass for Pacific C (800mm)	pc
	9400-S	Side panel glass for Pacific C (700mm)	pc
26	9400-T	Door glass for Pacific C (900mm)	pc
	9400-U	Door glass for Pacific C (800mm)	pc
	9400-V	Door glass for Pacific C (700mm)	pc
27	9400-W	Column for Pacific	pc
28	9400-X	Pacific C rail profile (900mm)	pc
	9400-Y	Pacific C rail profile (800mm)	pc
	9400-Z	Pacific C rail profile (700mm)	pc
29	9400-AA	Pacific C tray 90x90	pc
	9400-AB	Pacific C tray 80x80	pc
	9400-AC	Pacific C tray 70x90	pc
30	9400-AD	Pacific C tray front skirt 90x90	pc
	9400-AE	Pacific C tray front skirt 80x80	pc
	9400-AF	Pacific C tray front skirt 70x90	pc
31	9400-AG	Adjustable tray legs bolts with plastic feet	set
32	9400-AS	Drainage set	set
33	9400-AJ	Tray skirt clips with screw	pc

Measurement:

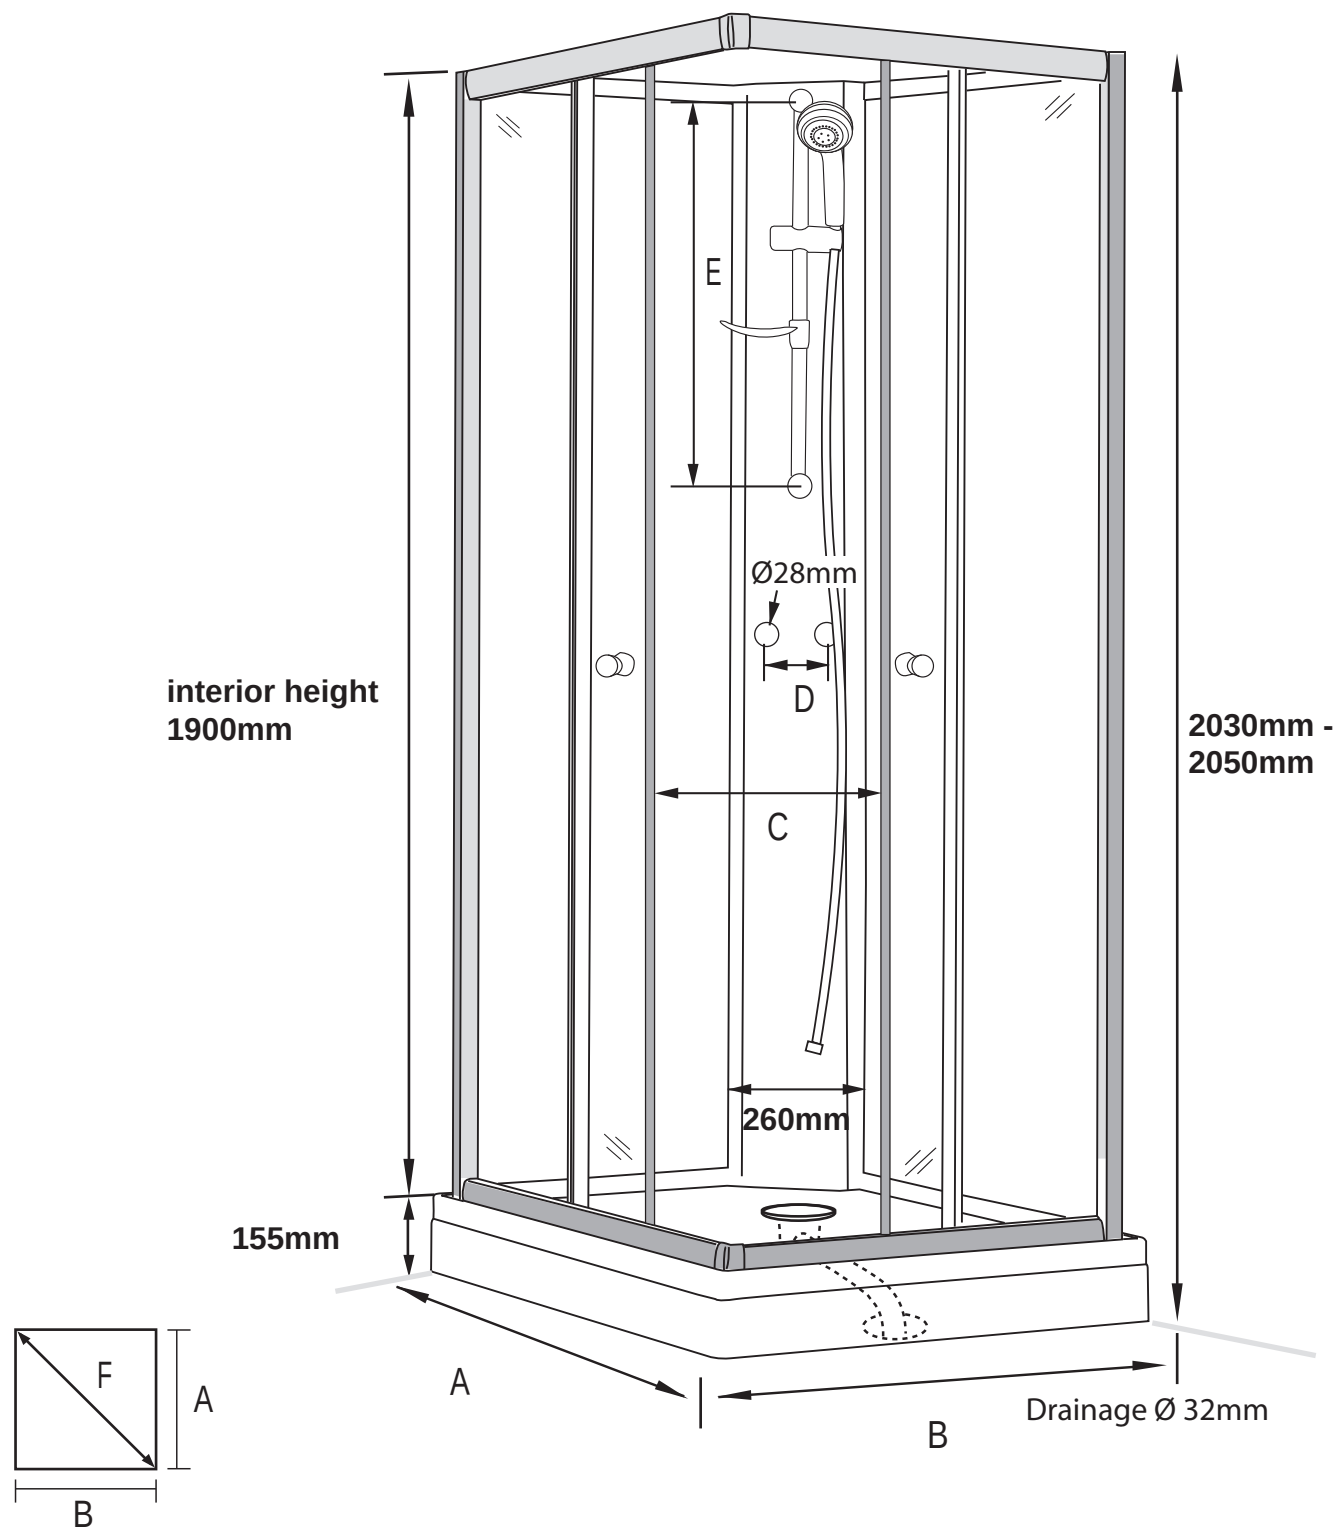


Model	A	B	C	D	E	F
90x90	900mm	900mm	455mm	152mm	500mm	1270mm
80x80	800mm	800mm	410mm			1130mm
70x90	700mm	900mm	410mm			1140mm
90x70	900mm	700mm	410mm			1140mm

1

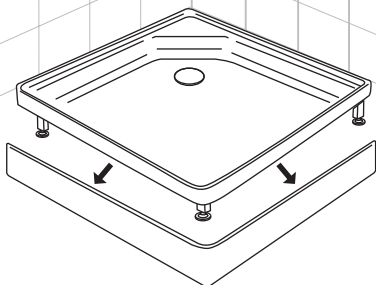


70 x 90 model


Right

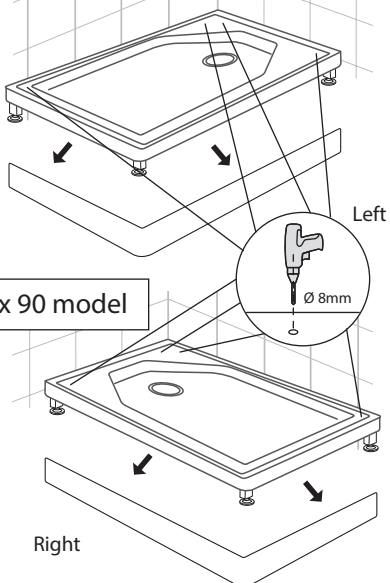


2

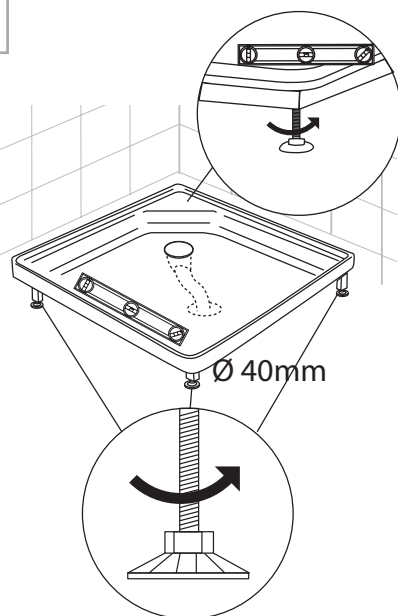


3

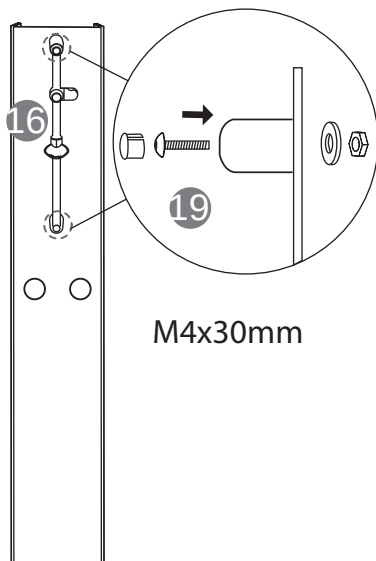

4

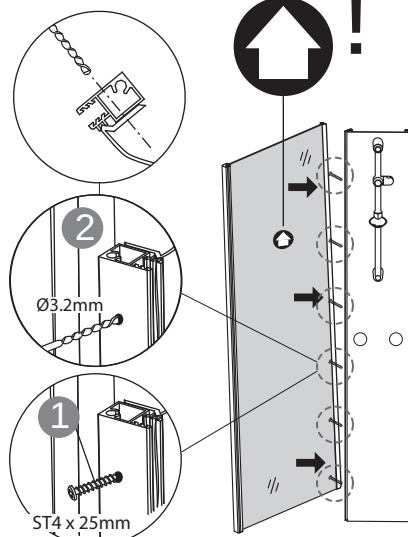


Right

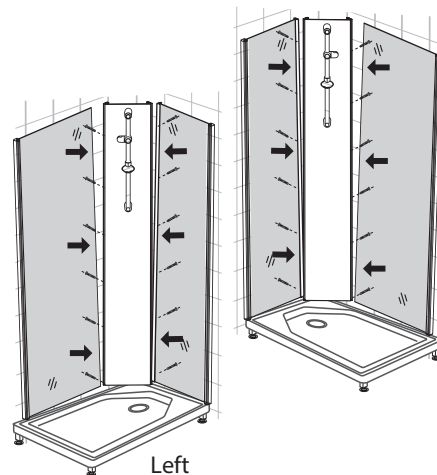


Left

70 x 90 model


5







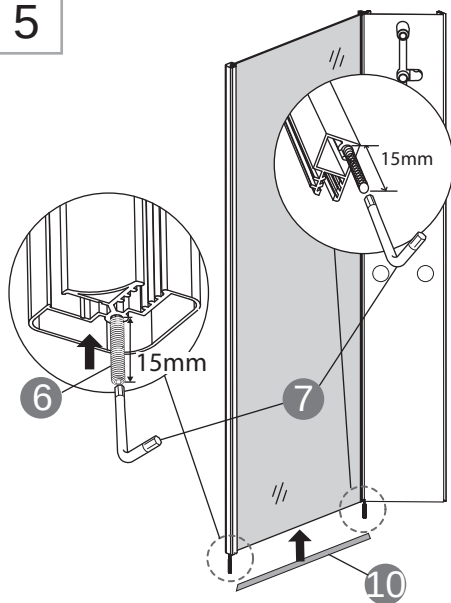


6

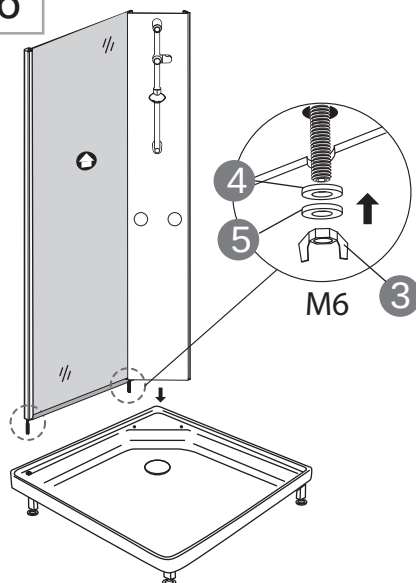


7

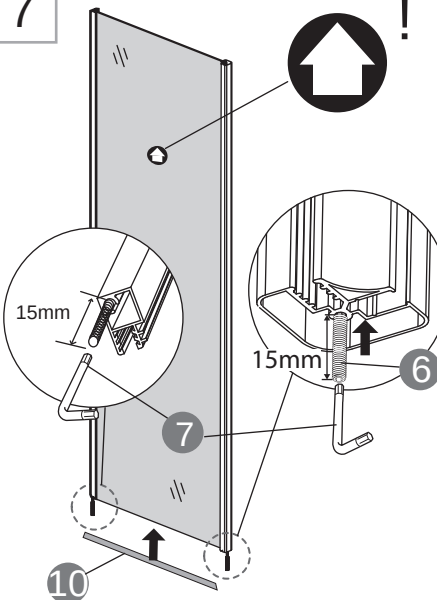

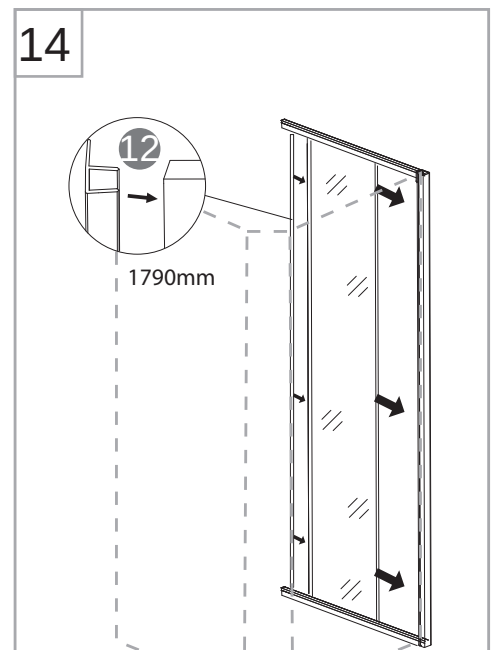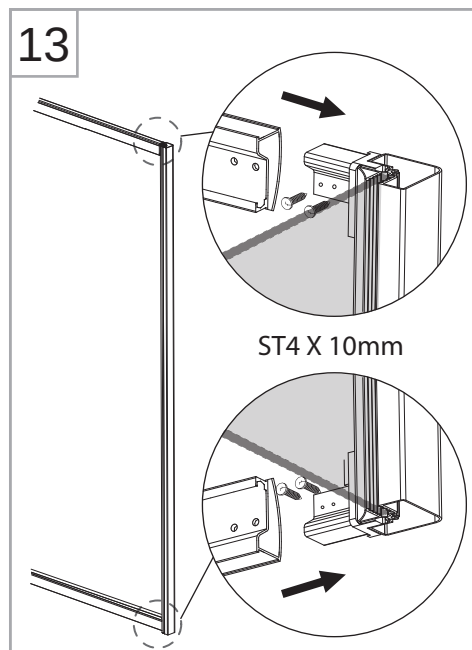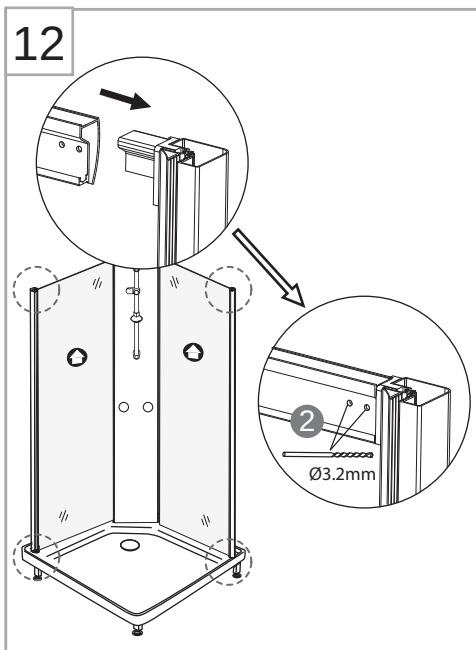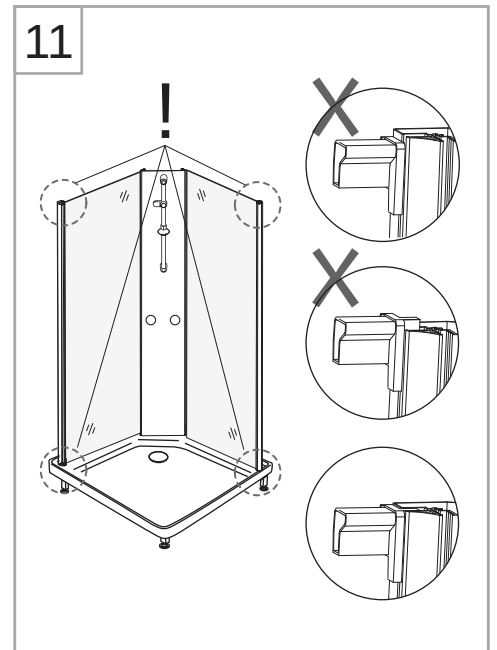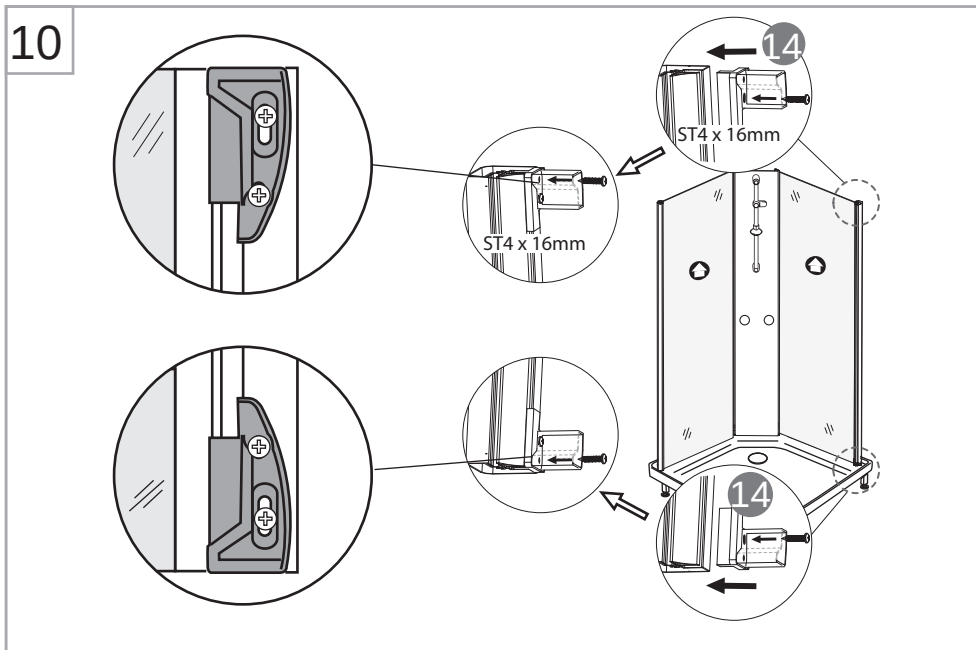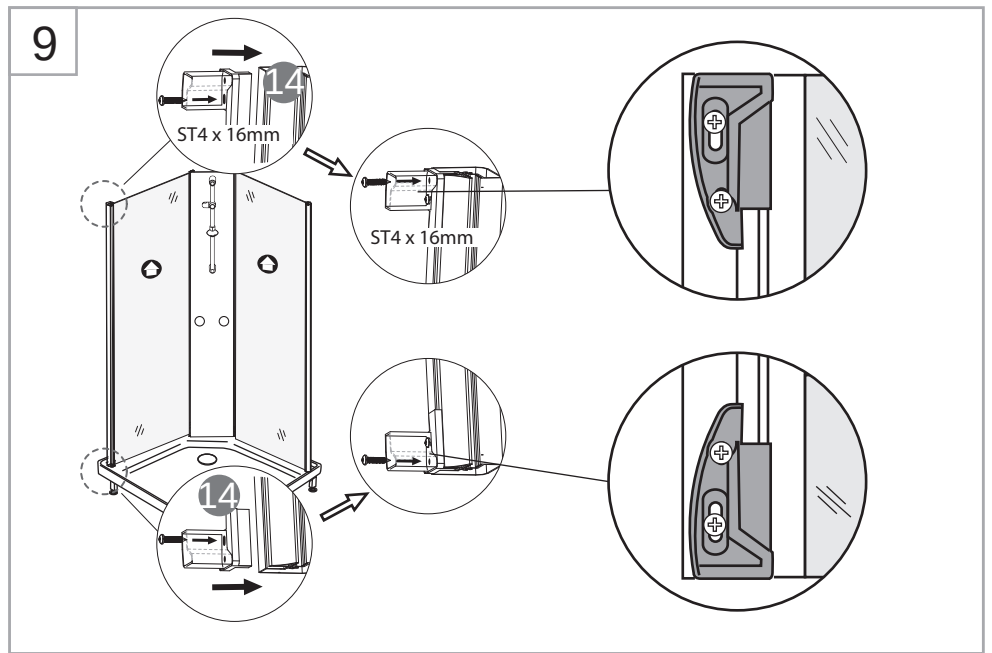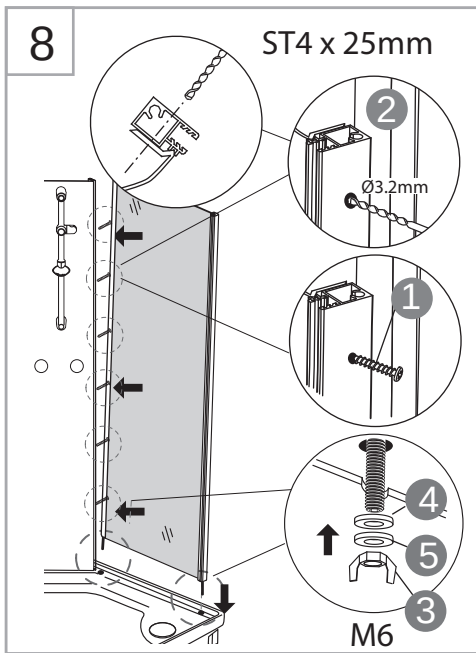


15

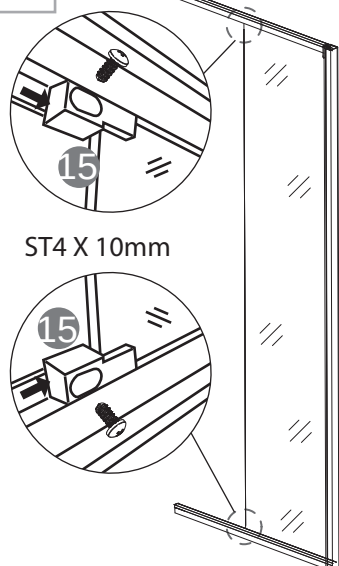


ST4 X 10mm

16

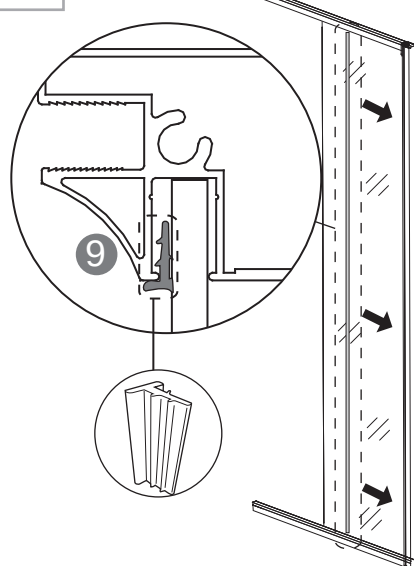


9

17

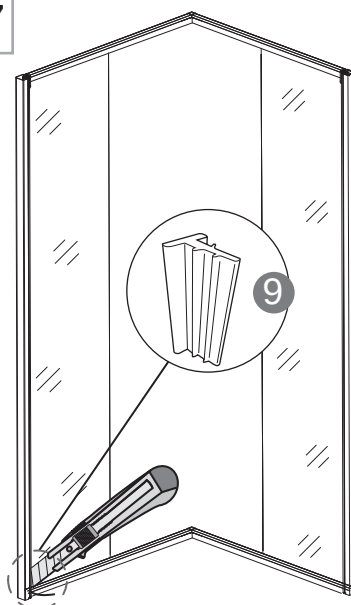


9

18

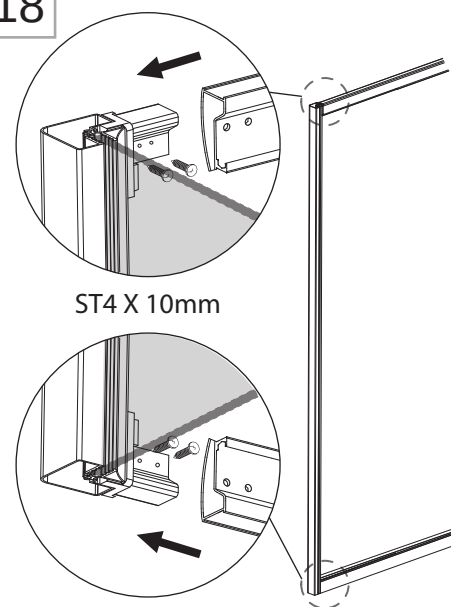


ST4 X 10mm

19

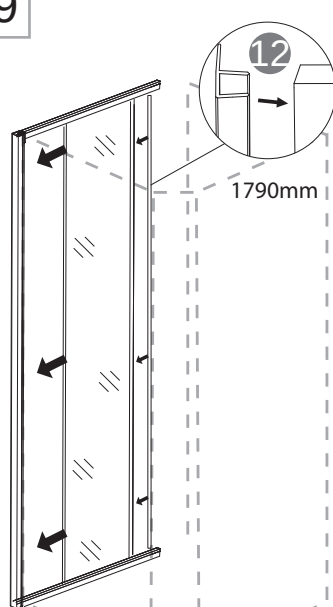


1790mm

20

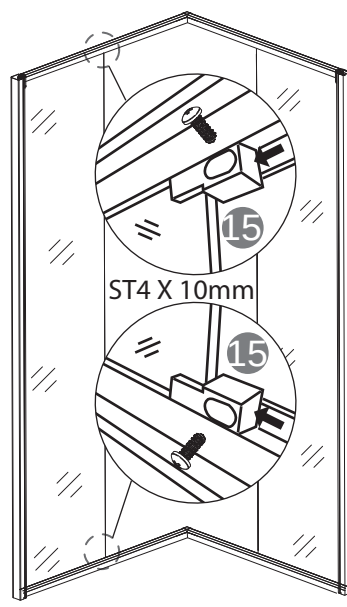


ST4 X 10mm

21

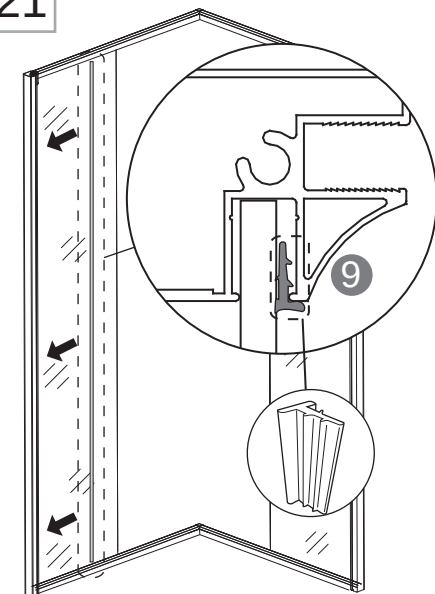


9

22

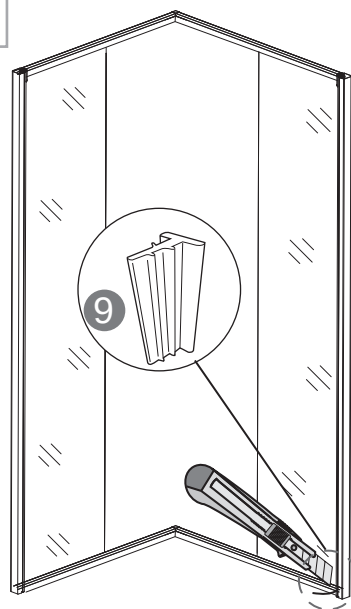







9


23

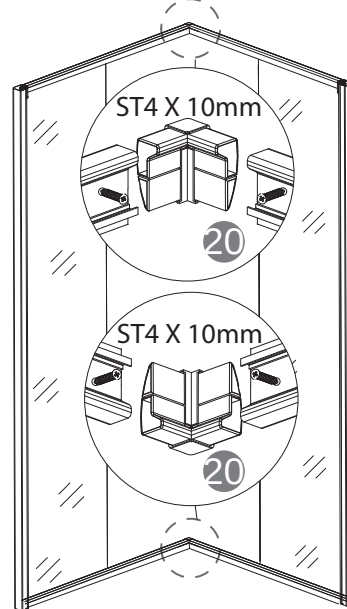

ST4 X 10mm

ST4 X 10mm

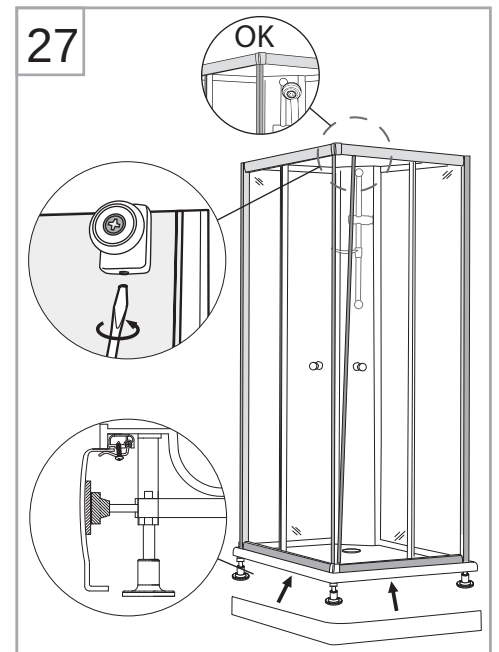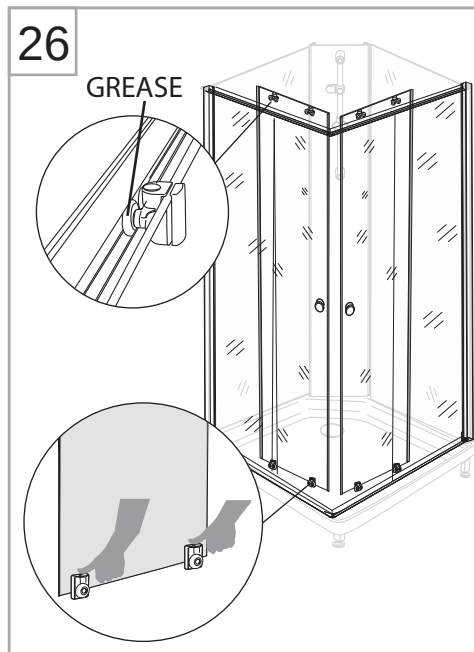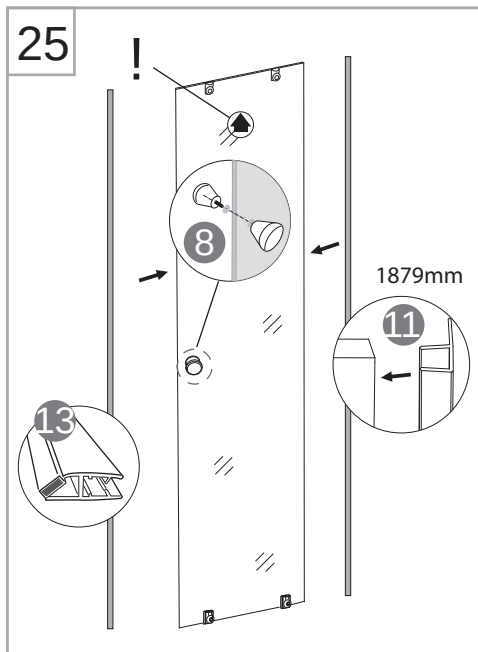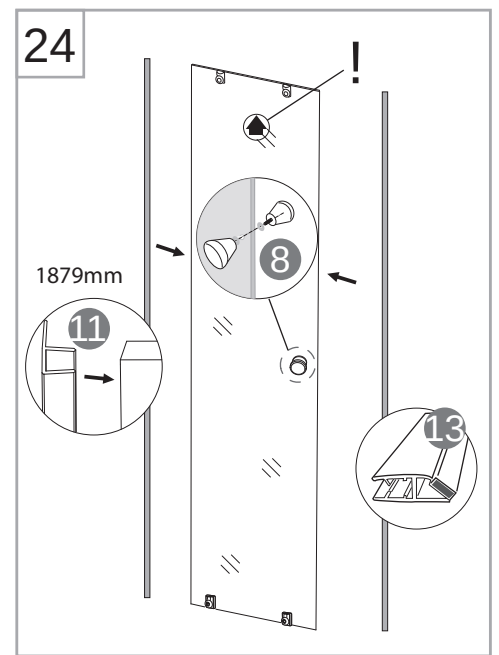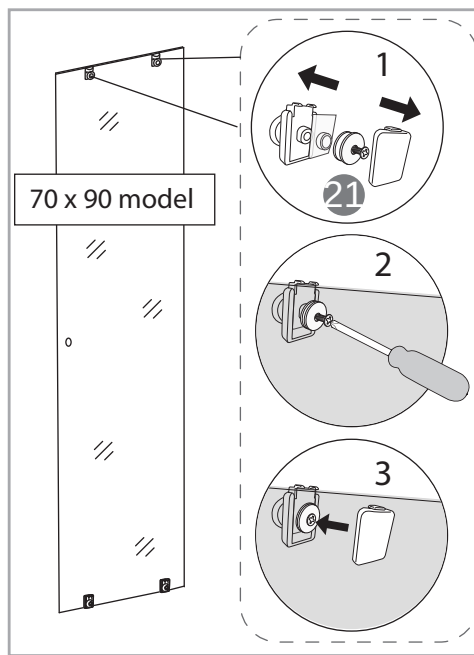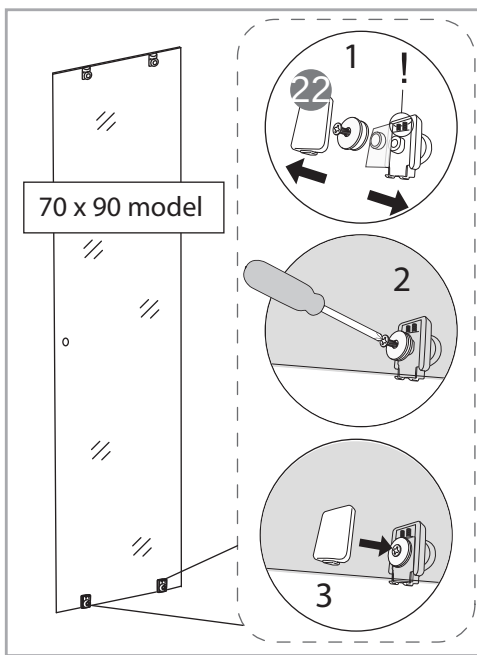

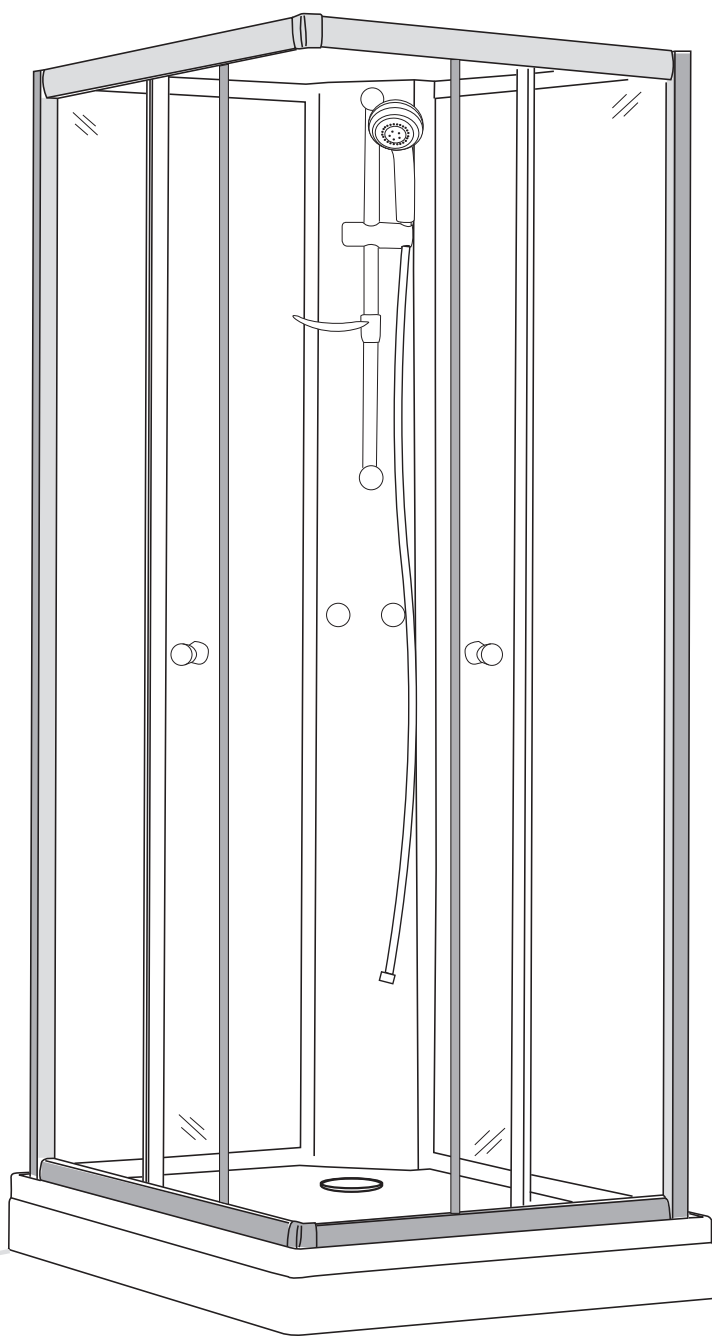

PACIFIC C

035 166430  SE
info@noro.se

020 7435740  FI
info@norokylpyhuone.fi

21 62 88 60  NO
info@noro.se

70 252822  DK
info@noro.dk